


 
 

Contents

Features	2
Accessories	2
Safety Precautions	3
Markings on the Product.....	4
Overview of the Remote Control	5
Connections.....	6
Remote Control	7
Connection to the TV	7
Power Connection	8
Power On-Off.....	8
Antenna Connection	8
USB Connection.....	9
First Time Installation.....	10
Menu System.....	10
Program	10
Navigating The Whole Channel List	11
Favorite List	11
Program Guide (EPG)	11
Picture	11
Channel Search.....	11
Time.....	11
Option	12
System	12
USB	12
OSD message	13
No Signal	13
Channel Navigation	13
Displaying Text	14
Specifications	14
Remote Control	14
Digital Capabilites.....	14
TV Scart.....	14
Trouble Shooting	15

Features

- DVB Teletext
- Channel capacity: 400
- DVB 7 days event information (7 days EPG)
- CVBS support and L/R headphone jack
- Last watched channel saving
- Automatic search for all channels
- Timer function programmable via EPG
- Favourite list
- HDMI output: 576i, 576p, 720p, 1080i, 1080p.
- USB input
- DVB-T-T2 Compliant
- LCN(logical channel number)support.
- Input frequency range: VHFIII; 174–230 MHz, 7MHz bandwidth
- UHFIV and UHFV; 470-862 MHz, 8MHz bandwidth
- Supports 16-, 64-, 256-QAM modulations
- Manual and automatic search options
- VIDEO & OSD :
- Video: MPEG2, PAL, 4:3/16:9
- MPEG-4 H.264/AVC MP@L 3 (SD) Video Decoder
- H.265/HEVC Main Profile up to 1080p 60 fps
- Decoding & Video Out: PAL
- Audio: MPEG-1 layer I / II, MPEG-2 layer II, MPEG-2 AAC, MPEG-4 AAC
- Multi-format audio decoder
- Multi language audio support
- Audio mute and volume control
- Low power consumption (less than 0.5W)

Accessories

 <p>Remote Controller</p>	 <p>Batteries 2 X AAA</p>
 <p>AC Adaptor</p>	 <p>Instruction Book</p>

Safety Precautions

Power Source

Always use the provided AC adaptor.

Operate only from the power source specified on the AC adaptor.

The power adaptor may become hot during normal operation. This is not a malfunction.

Please make sure that the adaptor is not covered while in operation. Leave a space of 15 cm (minimum) around the AC adaptor.

The rating information and safety caution of the AC adaptor are provided on the adaptor.

WARNING: When the set is not in use for a long time, disconnect from the power.

Power Cord

Do not place the unit, a piece of furniture, etc., on the power cord (mains lead), or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be routed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask closest service agent for help. When the AC power cord needs to be changed, it should be done at a qualified service shop only.

- Please do not place the set in a place subject to direct sun light, excessive dust or mechanical shock or in a location near heat sources.
- The set should be placed on a solid and safe base. Do not place the apparatus on a soft surface such as a rug that might block the ventilation holes on the bottom.
- A location such as a room with high humidity should not be selected as the condensation, arising in the kitchen for example, may cause malfunction or damage the set.
- Heating or other thermal radiation under the set also may cause malfunction or damage the set.
- The hot air, which arises during the operation, should be ventilated with sufficient air

circulation. Please do not put the set into closed areas and do not cover it.


- Please avoid the contact of the set with water or humidity. Do not put into operation near bath, swimming pools.
- Take care to provide a good air circulation. Place the apparatus in a location with adequate ventilation to prevent heat build-up in the apparatus.
- If any solid object or liquid falls into the cabinet, unplug the apparatus and have it checked by a qualified personnel before operating it any further.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases shall be placed on the apparatus.

The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.

CAUTION

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

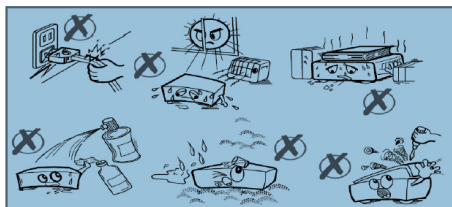

	WARNING RISK OF ELECTRIC SHOCK	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage within" the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

Markings on the Product

The following symbols are used **on the product** as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



Class II Equipment: This appliance is designed in such a way that it does not require a safety connection to electrical earth.



Class II Equipment With Functional Earthing: This appliance is designed in such a way that it does not require a safety connection to electrical earth, the earth connection is used for functional purposes.



Protective Earth Connection: The marked terminal is intended for connection of the protective earthing conductor associated with the supply wiring.



Hazardous Live Terminal: The marked terminal(s) is/are hazardous live under normal operating conditions.



Caution, See Operating Instructions: The marked area(s) contain(s) user replaceable coin or button cell batteries.



Class 1 Laser Product:

This product contains Class 1 laser source that is safe under reasonably foreseeable conditions

of operation.

WARNING

Do not ingest the battery, Chemical Burn Hazard


(The accessories supplied with or) This product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Overview of the Remote Control

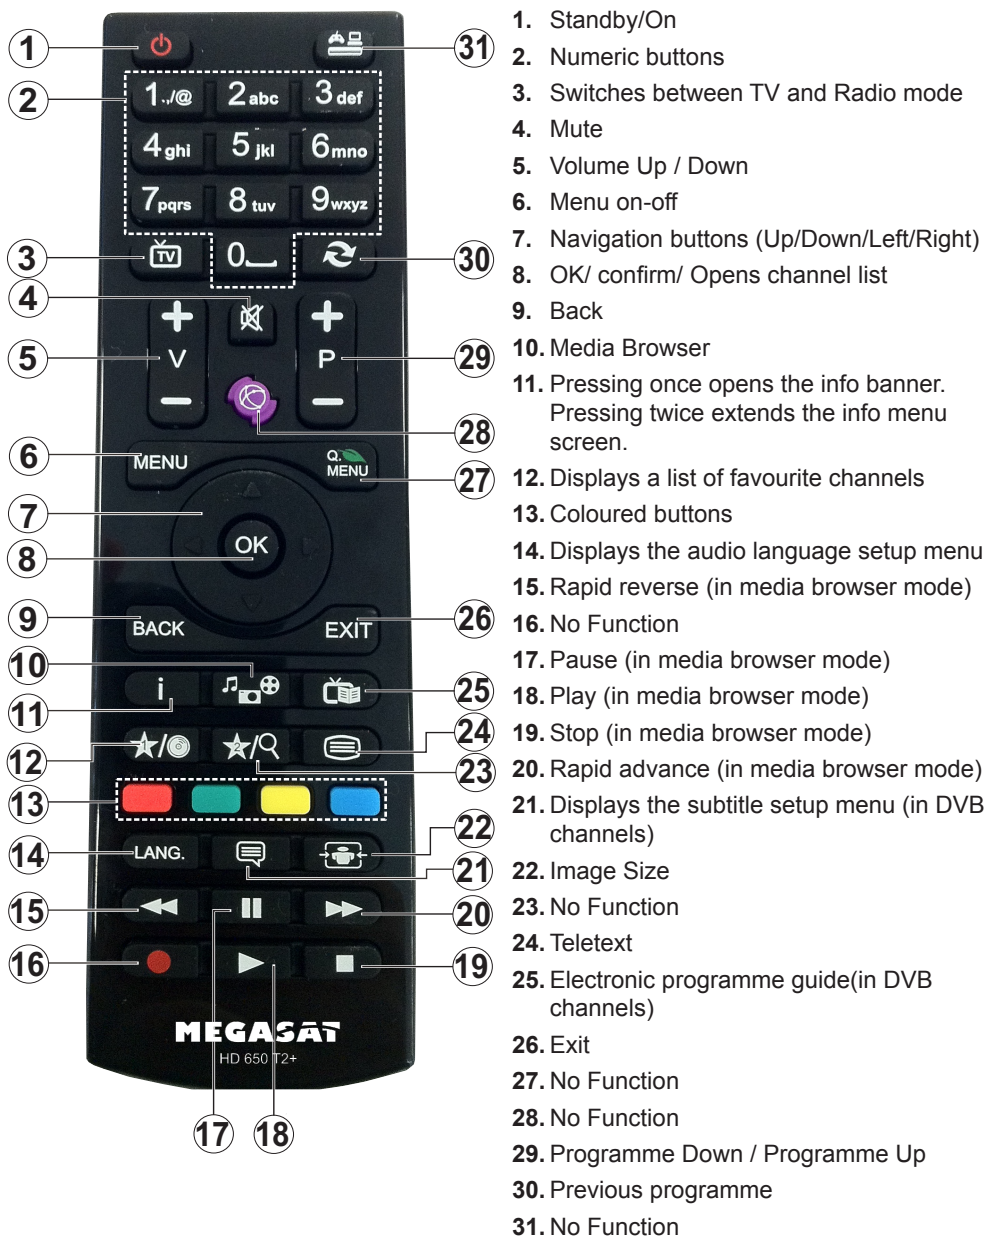


Connections

FRONT VIEW



1. POWER/STAND-BY button
2. Stand by Channel up
3. Stand by Channel Down
4. **USB INPUT:** To connect USB storage devices for media playback

BACK VIEW

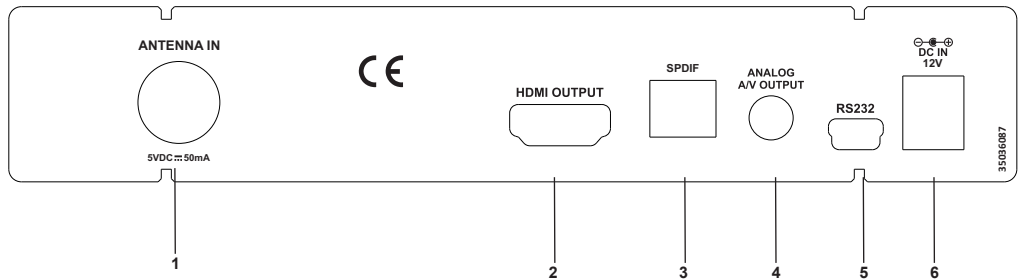

1. **ANTENNA IN** : Aerial input
2. **HDMI OUTPUT** : HDMI output connection
3. **Optical Audio Out:** You can use this connector to output the digital audio to an external sound device. Refer to your sound system instruction book for further information.
4. **ANALOG A/V OUTPUT:** Analog Audio/Video Output
5. **RS232:** Serial port (for service purposes)
6. **POWER INPUT** : DC IN (12V) power connection.


Make sure that you connect all cables and connections before you plug the units power adaptor plug into the mains socket.

Remote Control

First open the battery cover on the underside of the remote control. Put in both batteries 1.5Volt (RO3/AAA) referring to the imprinted symbols (+/-) in the battery case and put on the battery cover again. While using the remote control, direct it towards the front side of the receiver. If the remote control does not work or the chosen function does not work, the batteries are most probably exhausted and they should be replaced as soon as possible. Please use only the leak proof batteries. It is best to remove the batteries from the remote unit if you will not be using the remote control unit for long time.



Connection to the TV

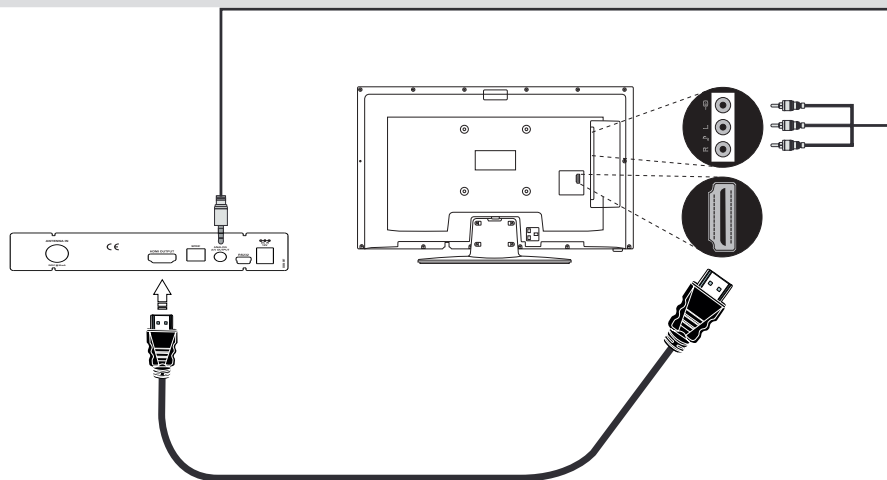


You can connect the set top box to your TV by using the scart socket or HDMI input. Use a scart or HDMI cable to connect the set top box to your TV. HDMI technology will provide you high quality picture performance. To get the best HD quality, TV connection via HDMI is advised.

The set top box gives RGB or CVBS output from scart or high definition quality from HDMI output.

Power Connection

IMPORTANT: This set top box is designed to operate on 12V DC. For this, an adaptor is used which gives 12 V voltage. Connect this adaptor to a system that supplies 220-240 V AC, 50/60Hz. After unpacking, allow the set-top box to reach the ambient room temperature before you connect the set to the mains.

Note: If a car cigarette lighter socket power plug adaptor is going to be used, it should be noted that if the output voltage reduces to lower than 12V, a smartcard error can be caused.

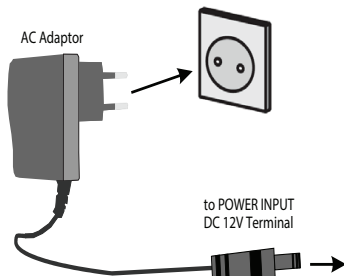


Power On-Off

Be sure that you put through all the cable connections. After plugging in the power adaptor cord of the set-top-box to the mains supply, a LED will be seen on the front panel (Standby mode). When the set-top-box is first powered up please wait for a while before activating the receiver since booting of software will take some time. Then, you can turn on your digital set-top box by pressing the standby button on the remote control. You will see that the LED on the front panel will change (Power on mode).

Auto Power Down:

This box will automatically be switched from active mode into standby mode, after less than four hours in active mode, following the last user interaction and/or a channel change with an alert message two minutes before going to standby mode. The Automatic power-down will be set as default and the user will be able to change Automatic power down to on or off in the menu

Antenna Connection

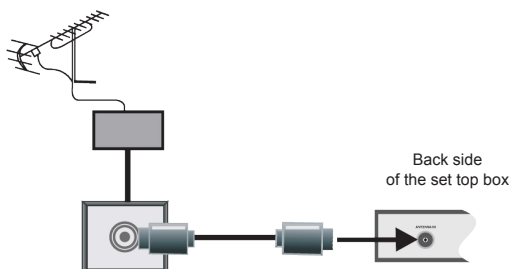

This illustration shows how to connect an antenna. Use **ANTENNA IN** to connect to an antenna system.

USB Connection

- You can connect a USB hard disc drive or USB memory stick to your box by using the USB input. This feature allows you to play files stored in a USB drive.
- 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives are supported.

IMPORTANT !

- You may back up your files before making any connections to the box in order to avoid any possible data loss. Note that manufacturer will not be responsible for any file damage or data loss.
- It is possible that certain types of USB devices (e.g. MP3 Players) or USB hard disc drives/ memory sticks may not be compatible with this device.

IMPORTANT: *The device supports only FAT32 disk formatting. NTFS format is not supported. If you connect a USB disc with NTFS format, you will be asked to format the content.*

USB Disc Connection

- Plug your USB device to the USB input of the box.

Note: *Plug or unplug your USB disc while the box is switched off.*

If you are going to connect a USB hard disc drive to the box, USB connection cable used between the disk drive and the box should have a USB logo and be as short as possible.

CAUTION !

- Plugging and unplugging USB devices swiftly is a hazardous operation. Plugging and unplugging repeatedly may cause physical damage to the USB player and the USB device itself.
- Do not pull out USB module while playing a file.

First Time Installation

IMPORTANT: *Ensure that the aerial is connected before switching on the set top box for the first time.*

When the box is switched on from stand-by mode and if there is no channel stored in the database, Installation Guide Menu window will be displayed on the screen. In the first menu screen, menu language will be asked.

By pressing the “◀” or “▶” button highlight the language you want to set. Press **OK** or highlight **Channel Search** and press “▶” button on the remote to start searching for channels.

The box will search available stations. The progress bar will move along the line. You should allow the set top box to complete the search to store all available stations.

Note: *You can press **EXIT** button to cancel or **MENU** button to skip Installation process.*

Menu System

Press the **MENU** button to access the main menu.

You can move between menus by using the directional (◀/▶/▼/▲) buttons on the remote control.

You can enter, select or confirm a menu option by using **OK** button.

In some sub-menus, you can use **EXIT** or **BACK** button to return to a previous menu screen.

To exit from a menu screen, you can press **MENU** button.

The following items can be accessed through the main menu screen:

- 1.) **Program**
- 2.) **Picture**
- 3.) **Channel Search**
- 4.) **Time**
- 5.) **Option**
- 6.) **System**
- 7.) **USB**

Program

Press **MENU** button to view the main menu. Select **Program** item by using ◀/▶ button. Press **OK** or ▼ button and highlight **Program Edit**. Press **OK** or ▶ button. You will be asked to enter the password. Default password is set as 0000. **Programme Edit** menu will be displayed.

Note: *You can directly press **OK** button to view All TV List.*

Press “▼”/“▲” button to select the channel that will be processed. Press ◀/▶ buttons to switch between All Radio and All TV channels lists.

Press **BLUE** button to delete selected channel.

Press **YELLOW** button to lock selected channel.

Press **GREEN** button to mark as skip. This channel will be skipped while changing the channels using the **Programme +/-** buttons.

Press **SWAP** button to rename selected channel.

Press **FAV** button to mark channels as favourites.

Press **EXIT/BACK** button to save and exit.

Deleting Channels

Select the channel that you want to delete and press **BLUE** button. A message will be displayed to confirm your decision. Press **OK** to delete the selected channel, press **EXIT** to cancel.

Renaming Channels

Select the channel that you want to rename and press **SWAP** button. Virtual keyboard will be displayed. Use the directional buttons to navigate through the virtual keyboard and press **OK** button to make selections. When finished, highlight **OK** from left side on the virtual keyboard and press **OK** button on the remote to save the new name. Press **EXIT** to cancel editing or highlight **Cancel** on the keyboard and press **OK**.

Adding Locks to Channels

Select the channel that you want to lock and press **YELLOW** button to lock/unlock the channel. Lock symbol will be displayed next to the selected channel.

Note: *Default PIN code is 0000 and it can be changed from the **System >Set Password** menu.*

Navigating The Whole Channel List

In the channel table “▼”/“▲” buttons serve for moving the focus to the previous or next channel. To watch a specific channel, highlight it using “▼”/“▲” buttons and press OK. Then the name and number of the selected channel will be displayed on the screen. If the selected channel is password protected, a pop up menu will be displayed. If the correct code is entered, the selected channel can be watched. Also you can select another channel by navigating with “▼”/“▲” buttons. The scroll Bar in the middle of the screen shows relative position of the currently visible channels with respect to the whole list.

Favorite List

Favorite channel list provides an easy way to group programmes in a customizable way. Using the **Program>Program Edit** menu you can add or remove channels to the favorite list.

Press **FAV** button on the remote to open Favorite List. You can change the position of the channels in the list. Highlight the desired channel and press the **RED** button. Use the “▼”/“▲” buttons to reposition the channel and press **OK** button to confirm.

Program Guide (EPG)

To display **Program Guide** press the **EPG** button on the remote. The **Program Guide** can be reached from the **Program>EPG** menu. You can get Information of the programs weekly by means of 7-DAY–EPG.

- Press “◀” / “▶” buttons to navigate through channels.
- Press “▼” / “▲” buttons to navigate through the events of the selected channel.

Please note that event information is updated automatically. If there is no event information available, only program names and dates are displayed.

Set Reminder/ Cancel Reminder

Press **OK** or **INFO** button to open **Schedule** menu. You can add reminders for selected events using this menu options. You can also edit or delete previously added reminders on the list. Highlight a reminder from the list. Press **GREEN** button to edit and **BLUE** button to delete the selected reminder. Press **EXIT/BACK** button to return to the **Program Guide** menu.

Picture

Press the **MENU** button and select **Picture** from the list using the “◀” / “▶” buttons on the remote. Press **OK** or “▼” button to enter. Two options are available: **Aspect Ratio**, **Resolution**.

Aspect Ratio

The channels can be broadcast in a widescreen format which must be output differently to normal and wide screen set top box sets.

This function defines the screen format of the connected TV to enable broadcasts’ being displayed correctly.

You can set Aspect Ratio between Auto, 16:9 PillarBox, 16:9 Pan&Scan, 4:3 Letter Box, 4:3 Pan&Scan, 4:3 Full or 16:9 Wide Screen.

Resolution

By pressing “◀”/“▶” on the remote control, you can set the HDMI resolution as 576i, 576P, 720P, 1080i or 1080P(50Hz).

Channel Search

Press the **MENU** button and select **Channel Search** from the list using the “◀” / “▶” buttons on the remote. Press **OK** or “▼” button to enter. Three options are available: **Auto Search**, **Manual Search**, **Antenna Power**.

To start an automatic channel scan highlight **Auto Search** and press the **OK** or “▶” button.

To start a manual channel scan highlight **Manual Search** and press the **OK** or “▶” button. On the next screen you can set the **Frequency Channel** and then press OK to start the search. On this screen you can also see the **Frequency**, **Bandwidth**, signal level and signal quality values.

Time

Select **Time** in the main menu to configure time settings. Press **OK** or “▼” button to enter.

Use “▲” or “▼” buttons to highlight the desired menu option. Press “◀” / “▶” buttons to set.

Time Offset can be set as **Auto** or **Manual** if **Auto** is selected, **Time Zone** option will not be available to be set. To set **Time Zone** option **Time Offset** should be set as **Manual**.

Country Region option can not be set and shows the current region.

A sleep timer can be set using the **Sleep** item in the menu. Using this item you can set the box to switch to sleep mode after a selected period of time. **1,2,3,4,5 Hour** and **Off** options are available.

Using the **Power On/Off** sub-menu options you can set the box to turn on or off at selected time. Highlight Power On/Off and press "▶" button the see the sub-menu options. Set the **Power On** or **Power Off** option as **Enable** and then the **Power On Time** or **Power Off Time** as desired.

Option

Select **Option** in the main menu to configure Time settings. Press **OK** or "▼" button to enter.

OSD Language: Shows the language of the on-screen menus. To change the language press "◀" / "▶" button on the remote.

Subtitle Language: Set the subtitle language using the "◀" / "▶" buttons. To turn off the subtitles set as **Off**.

Audio Language: Set the audio language using the "◀" / "▶" buttons.

Digital Audio: To set the digital audio out type highlight this options and press "◀" / "▶" button. **PCM** and **Compressed** options are available.

Audio Description: You can turn off or set to a value between 1-32.

System

Press the **MENU** button and select **System** from the list using the "◀" / "▶" buttons on the remote. Press **OK** or "▼" button to enter. Four options are available: **Set Password**, **Restore Factory Default**, **Information** and **CA menu**.

Set Password: You can set the system and parental of the box. Highlight **Set Password** option and press **OK** or "▶" button to display the sub-menu. Select the option you want to reset enter the new password. Use numeric buttons to enter the old and new password numbers. You will need to enter your new password a second time for verification purposes. If both password numbers are four digits long and the same, the password will be changed. The factory default password number is 0000 for both options. If you change the password number, make sure you write it down and keep it safe for future references. **Restore Factory Default:** Highlight **Restore Factory Default** option and press **OK**

or "▶" button to reset to factory default settings. You should enter the correct password first. To confirm and continue press **OK** button or press **EXIT** to cancel.

 
Information: Highlight **Information** option and press **OK** or "▶" button to display information about your receiver. **Model**, **SW Version** and **HW Version** will be displayed.

CA Menu: Highlight **CA Menu** option and press **OK** or "▶" button to display conditional access menus. For additional information concerning this topic please visit our webpage: www.megasat.tv

USB

Press the **MENU** button and select **USB** from the list using the "◀" / "▶" buttons on the remote. Press **OK** or "▼" button to enter. USB menu options will be displayed. Three options are available: **Multimedia**, **Photo Configure** and **Movie Configure**.

Multimedia

You can play/display music, video and picture files installed on a connected USB storage device. Select **Multimedia** in **USB** menu by using Up or Down button and press **OK** button to display media selection screen. To access multimedia menu options quickly press  button on the remote. Select the desired media type and press **OK** button the proceed.

Note: Some USB compliant devices may not be supported. If the USB storage device is not recognized after power off/on or First Time Installation, first, plug the USB device out and power off/on the set-top box. Plug in the USB device into the USB input of the box again.

Playing Audio Files

Select **Music** as media type and press **OK** button. Select the folder that contains music files if they are not installed in the root folder of the USB device. Only the available music files will be displayed.

OK button: Plays the selected file.

▶ button: Plays all media files in the folder starting with the selected one.

■ button: Stop the playing file.

|| button: Pause/resume playing file.

▶▶ button: Rapid advance.

◀◀ button: Rapid reverse.

Viewing JPG Files

Select **Photo** as media type and press **OK** button. Select the folder that contains image files if they are not installed in the root folder of the USB device. Only the available image files will be displayed.

OK button: Views the selected picture in full screen. After pressing OK button following operations can be done:

Red button: Zoom

Green button: Rotate

Back: Back to the previous folder.

► **button:** Starts the slideshow with all pictures in the folder.

Blue button: Preview all pictures in thumbnails view.

Playing Video Files

Select **Video** as media type and press **OK** button. Select the folder that contains video files if they are not installed in the root folder of the USB device. Only the available video files will be displayed.

► **button:** Play the selected video.

■ **button:** Stop the playing video.

|| **button:** Pause/resume playing video.

►► **buttons:** Rapid advance.

◄◄ **buttons:** Rapid reverse.

Back: Back to the previous folder.

Red button: Switch between Preview and Full screen.

Photo Configure

Select **USB** option from the main menu. Then select **Photo Configure** and press OK or "►" button. The following options are available:

Slide Time: Specify a time interval for each slide. This option can be set between 1 and 8 seconds.

Slide Mode: Set the slide mode as Random or as desired value between 0 and 59.

Aspect Ratio: Set as **Keep** in order to keep your photo's aspect ratio. Set as **Discard** to let the image fit to screen's aspect ratio. **Movie Configure**

Select **USB** option from the main menu. Then select **Movie Configure** and press OK or "►" button. The following options are available:

Subtitle Specific: Set the subtitle font size.

Subtitle BG: Set the subtitle background color.

Subtitle Font Color: Set the subtitle font color.

OSD message

No Signal

When the box receives no signal (e.g. the antenna cable is disconnected), "No signal" message will be displayed on the screen.

Channel Navigation

Channel Buttons: Pressing **P+** / **P-** buttons will switch to the next or previous channel in the list.

Numeric Buttons: Pressing a numeric button will activate a small digit entry window on the upper right corner of the screen. After a digit is entered, the box will wait for 5 seconds in case you enter another one. If no digit is entered within these 5 seconds, the box will switch to the entered channel number.

If a number is entered, to which no channel is assigned "Invalid Channel" message will be displayed on the screen.

Each time the box switches to the desired channel or **Info (i)** button is pressed an information banner will be displayed on the bottom side of the screen. The bar in the middle of the banner indicates the duration of the current program. On the channel info banner there are:

- Channel number.
- Name of the channel.
- Programme duration bar.
- Current event name, next event name, and their 'start' and 'end' times.



When switching to a locked channel, password is requested. The channel can be watched only if the correct password is entered. To skip this channel, use **P+** / **P-** buttons.

When **V+** / **V-** buttons are pressed, volume level bar is displayed. This shows the present volume level graphically.

When the **MUTE** button is pressed, a mute symbol is displayed on the screen. This symbol won't disappear until the **MUTE** button or **V+** / **V-** buttons are pressed. The **MUTE** button won't work if a menu is being displayed on the screen.

Displaying Text

Some channels have teletext pages broadcast along with the television programme.

Press  button to activate teletext pages (if available). Press the  button again to exit.

You can navigate the teletext pages by using the directional buttons ("▼"/"▲"/"◀"/"▶"), OK and the coloured buttons.

Note: If the subtitle is on, teletext page cannot be displayed.

Specifications

GENERAL

Power supply for set-top box: 12V DC - 220 - 240 V AC, 50-60Hz

Input Frequency :174MHz - 862 MHz

Power consumption : 10,8 W (max)

Active antenna output : 5V - 50mA

Operating temperature : 5°C to +40°C

Storage temperature : -20°C to +70°C

Humidity : 25 to 75 % rel

Physical dimensions : 174.70 x 141.50 x 39.30mm

Weight : 280 g

Standby Low power consumption: Less than 0.5W

USB

Current Limit : 5V @ 500mA max

Remote Control

Operating Distance: 10m Max.

Batteries : 2x1.5V (R-03/AAA)

Digital Capabilities

Transmission Standards:

MPEG2, MPEG4 DVB-T

MPEG2, MPEG4 HD DVB-T2

Demodulation:

• **Symbolrate:** COFDM with 2K/8K FFT mode.

• **Modulation:** 16-QAM - 64-QAM FEC for all DVB modes (automatically found), 256-QAM for DVB-T2.

Video:

MPEG-1/2/4 Video Decoder

- Supports ISO/IEC 13818-2 MPEG-2 MP@HL video decoding up to 1080p@30fps

- Supports ISO/IEC 14496-2 MPEG-4 SP and ASP video decoding up to 1080p@30fps

H.264 Decoder

- Supports ITU-T H.264, ISO/IEC 14496-10 main and high profile up to level 4.1 video decoding

- Supports resolution up to 1080p@30fps

- H.265/HEVC Main Profile up to 1080p 60 fps

Audio:

- MPEG-1, MPEG-2 (Layer I/II), MP3, AC-3 (Dolby Digital), AAC-LC

- E-AC-3 (Dolby Digital Plus)

- AAC, HE-AAC 5.1 multi-channel decoding

-Simultaneously supports HE-AAC decoding and transcoding to AC-3

-AC-3 stream output through SPDIF

-Stereo audio description decoding

-RA8-LBR decoding

Media Player

Supported files: mp3, jpeg, avi, mkv

Trick modes: Available

MP3 ID3 Tag support: Available

Mpeg4 file and MKV Playback: Available

Rotate: Available

TRADEMARK ACKNOWLEDGMENT

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

Trouble Shooting

Trouble	Possible Reasons	What To Do
The standby led is not lit.	Adaptor cable is not connected.	Check if the adaptor cable is plugged into the power socket.
No picture or sound.	No signal or weak signal.	Check the signal cable and A/V HDMI connectors.
The settings you have done in the menus have not been changed.	The digital set-top box was unplugged without first going to standby.	Before unplugging your digital set-top box, wait for going to standby.
The remote control is not working.	<ul style="list-style-type: none"> • The set-top-box is in standby. • Remote control is incorrectly aimed. • Batteries are exhausted. 	<ul style="list-style-type: none"> • Press the standby button. • Check if nothing blocks the front panel. • Change the batteries.
You have forgotten any channel lock code.		Contact your dealer or service.
Video is ok for HDMI output, but audio is not ok.	Because of HDMI line is crashed.	Unplug and plug TV and STB at the same time.